



[Note]

- 2 bezel (escutcheon) mounting plates are put in the pocket. Install the bezel mounting plates as shown.

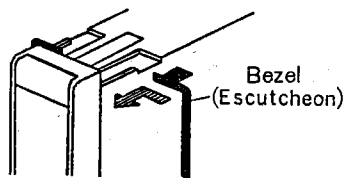



- Remove top and bottom name plates by gently pulling forward. Turn the top and bottom mounting screws clockwise and lock the metal fitting against the back of the panel. Turning the mounting screws counterclockwise will release the meter.

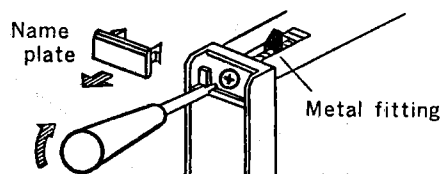

- Clearance of 5 cm must be maintained above and below the meter. Failure to ensure correct clearance may cause overheating and damage to the meter.
- With top and bottom nameplates removed, the clear cover and scaleplate can be removed.

INSTRUCTION

Dual setpoint model does not have the setting lamps for HH & LL (buttons)

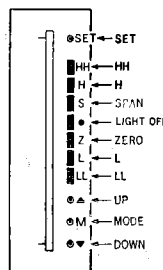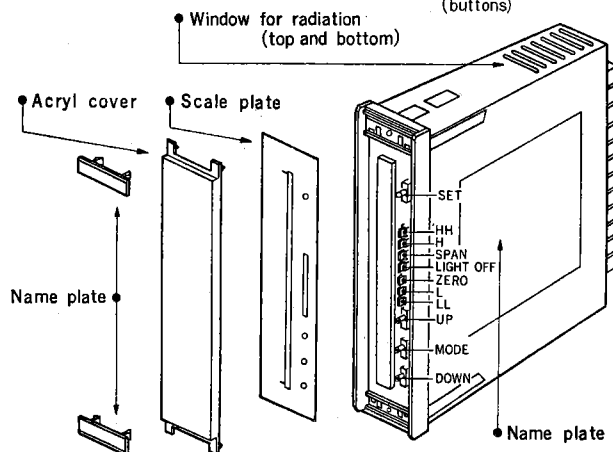

SETTING HH (H, L, LL) SET POINT

Select HH with the MODE button. Secondary, shift the bar up or down to a specified value with the button ▲ or ▼. Press the SET button. (in case of H, L, LL, and so forth)

ZERO OR SPAN ADJUSTMENT

Select ZERO OR SPAN with the MODE button. Secondary, shift the bar up or down to correct the value with the button ▲ or ▼. Press SET button.

- ◇ Pressing ▲ twice will shift indicator by one segment. Indicator shifts faster if you keep pressing it.
- ◇ All settings can be exouted by pressing SET button.
- ◇ Bar indications except setpoint bars can be lit off with LIGHT OFF button.
- ◇ ZERO and SPAN are factory set at delivery.

INSTRUCTION

